

BREAKER PANEL

SENSOR- LIGHT OR GAS FE FIRE EXTINGUISHER

⇒ ELECTRICAL OUTLET

\$ ELECTRICAL SWITCH

EXTERIOR LIGHT

